

LOOSE LAYING

■ 1 - TARAFLEX® BADMINTON / SEPAK TAKRAW

The TARAFLEX® BADMINTON/or SEPAK TAKRAW court is divided into three long sections. The whole kit includes 2 instant fastening Velcro-type tapes plus an assembly machine.

1.1 - Laying out

The correct game lines for Badminton or Sepak Takraw are already marked out on the transportable court. It is therefore essential to follow the assembly instructions.

Unroll each of the three long sections in their correct order, positioning them edge-to-edge very exactly, leaving no gaps between the sections.

1.2 - Assembly

Take the assembly machine equipped with its Velcro-type self fastening tape dispenser.

Position the tape by moving the machine to feed out the tape lengthwise.

Walk over the joints to create a good bond with the self fastening tape.

■ 2 - TARAFLEX® TABLE TENNIS

2.1 - Laying out the flooring

- The ambient temperature must be above 15 °C.
- Strike the transverse and longitudinal axis of the sports floor on the subfloor.


GERFLOR TABLE TENNIS is laid in the opposite direction from the table.

2.2 - Flattening

The roll must be ALLOWED TO LAY FLAT widthwise in the sports hall for at least 24 hours leaving a 1 cm overlap between each length and following the numbered order of the different lengths.

2.3 - Positioning

The roll are butted up to the axis and placed edge-to-edge without leaving a gap.

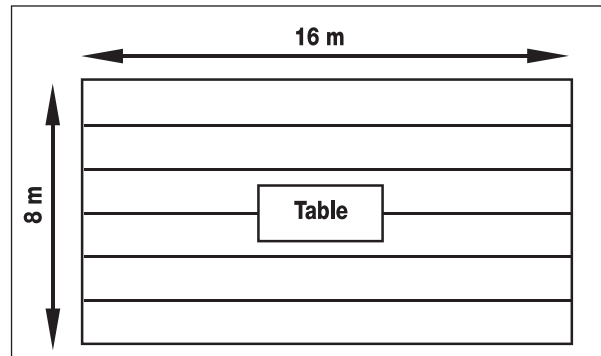

2.4 - Fixing the lengths

The lengths are held together with double-sided adhesive tape D 200 on varnish wood from GERFLOR. The double-sided adhesive tape is applied with a specially designed dispenser.

Note : If it is being put down on a varnished wood strip flooring, check the adhesion properties before installing. If the subfloor shows advertising logos or stuck-down game lines, they may be damaged.

IMPORTANT

GERFLOR cannot be liable for the performance of a double-sided adhesive tape which was not supplied by GERFLOR.

2.5 - Removal of the court

Remove the double-sided adhesive tape using the same machine as before.

- Roll the lengths on their packing tubes foam inside :
 - either manually
 - or with a roll/unroll trolley Ref. 852 148 000 from JANSER.
- Secure the sections with tightening straps Ref. 851 053 000 from JANSER.
- Store the roll vertically or on suitable storing devices Ref. 852 097 000 from JANSER.

■ 3 - REMOVABLE INSTALLATION OF THE BATECO PROTECTION FLOORING EXCLUDING SPORTING USAGE

Remark: Differences in width (tolerances) may exist between the strips.

1 - Unrolling

Unroll the strips by placing them side by side, as precisely as possible. There must not be any space between the strips.

The Bateco product has no shielding, it is thus mandatory to leave 40 cm excess on a 20 m strip and to let the product relax after 3 uses before adjusting the dimensions of the product to the room.

2 - Assembly

We recommend assembly with a single-side adhesive applied with the 50 or 100 mm wide single-face tape reel.

Type : Janser réf.: 895 100 000



Single-side tape reel - H367 0003